August International Ltd
United Kingdom
Telephone:0870 850 3525
www.augustint.com

August®

User Manual

7 Inch Portable DVD Player

with built-in Digital & Analogue tuner, card reader and USB port

PD712A

User Manual

Thank you for buying our August TV. You may already be familiar with using a similar product but please take time to read these instructions carefully. It is designed to familiarise you with the product's many features and to ensure that you get the very best from your purchase.

Safety

To ensure your safety and the safety of others, please ensure you read the Safety Instructions **before** you use this product.

Disposal

Please ensure the product and its accessories are disposed in compliance with WEEE (Waste Electrical and Electronic Equipment) Directive and other regulations. Please check with your local authority for disposal regulations.

Customer Service:

If you need help, please contact our Customer Service:
Telephone: +44 (0) 870 850 3525
Email: service@augustint.com

Quick Start Guide

PD712A

1. To play a DVD or CD, insert the disc into the DVD drive, press DVD to switch to DVD mode, press PLAY or wait for the player to load the disc automatically.

2. To play music, photos or video files on a SD card or memory stick, insert the SD card or memory stick to the card slot or USB port, press DVD to switch to DVD mode, press LEFT or RIGHT to switch between the "Audio", "Photo", "Video" folders and Subtracks, press UP or DOWN to select the file you want to play, press ENTER or PLAY to start playing.

3. It is suggested that you use a roof top aerial when scanning for TV channels for the first time, if any signal is detected, the channel information will be saved on the TV, you may then switch back to the portable antenna supplied and change your location to find the best place to receive the signal.

4. To search for Digital Freeview TV at the first time, press DVB to switch to DVB (Freeview TV) mode, it will ask you to do the "First Time Installation". Follow the instructions to select "Country" and "OSD Language", then start the "Auto Scan". Once the scan has finished, press CH+, CH- or EPG to select channels. Press REV/RADIO to switch between Freeview TV and Radio channels.

5. If you have done the first time installation before, and would like to search for Digital Freeview channels again, or if you have moved to a different region and need to scan channels again, press DVB to switch to DVB (Freeview TV) mode, then press SETUP, press RIGHT to select "Installation", press DOWN to select "Auto Scan", press ENTER, press LEFT or RIGHT to select the correct "Country", press DOWN to select "Start Scan", then press ENTER to start. Once the scan has finished, press CH+, CH- or EPG to select channels. Press REV/RADIO to switch between Freeview TV and Radio channels.

6. To search for Analogue TV, press MODE on the remote and you should see either “AUTO”, “PAL” or “SECAM” at the top right corner of the screen. Pressing MENU repeatedly will move to “PRESET” and “AUTO SEARCH” is selected, press RIGHT to start searching for channels.

7. Please note the included portable antenna may only be used in areas where signal is very strong. There may be difficulties in receiving signal with the portable antenna in some regions at present, this is due to the fact that Freeview (www.freeview.co.uk) is yet to operate in full power in the UK. The government aims to achieve a full switchover by 2012, which will occur in stages, region by region between 2008 and 2012, at present the quality of Freeview reception varies in different regions across the UK.

   As mentioned on the Freeview website, only 73% of the UK population is able to receive Freeview at present and only a small number of households might be able to use a set top aerial at present. This only applies if you live in an area with coverage close to a transmitter, but reception would still be unreliable and they strongly recommend that you use a roof top aerial for good reception.

   The reception will be improving along with the progress of the Digital Switchover Program. Reception may also be affected by various factors such as how close you are to transmitters, tall buildings, thick walls, ceilings and weather etc.

8. For any further queries, please telephone August International Ltd helpline 0870 850 3525 or email service@augustint.com

Contents

1.Safety Instructions 1

2.Product Features 4

3.Accessories 5

4.Remote Control 5

5.Part Names and Functions 6

6.System Connection 9

7.DVD Player Operation 10

7.1.Basic Operations 11

7.2.DVD Setup Menu 13

7.3.Playing MP3 Music 18

7.4.Playing JPEG Photos 18

7.5.Playing MPEG4 Video 19

7.6.USB Port Function 19

7.7. Card Reader Function 19

8.Digital Freeview TV (DVB-T) 19

9.Screen Setting 23

10.Analogue TV 24

11.Battery Charging 26

12.Troubleshooting 27

13.Technical Parameters 28

14.Warranty 30

1. Safety Instructions

Storage and Use

- Do not use defect power cable.

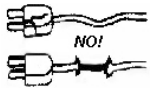

- Avoid dust as it may clog player parts.

- Do not overload power sockets as this can result in fire or electric shock.

- Keep the player away from water or damp environment.

- Do not place anything on top of the power cable.

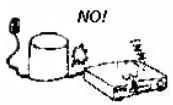

- Never block any openings on the player.

- Avoid this player from being dropped.

- Never block the ventilation openings under the player.

- Do not put any objects inside the player as this may damage parts or result in a shock or fire.

- Keep the player away from extreme heat.

- Do not attempt any repairs, as this will invalidate the warranty. Parts inside are subject to high voltage.

- Always keep the player ventilated.

- Keep and use the player on a stable surface.

- Keep the screen out of direct light.

- If Troubleshooting doesn't solve your problem, please contact our customer service.

- Do not adjust anything not covered in the manual.

- In case of lightening unplug the power supply of the player.

- Keep containers filled with liquids away from the player.

- If any unusual sounds or smells are given off, unplug the power supply of the player and contact our customer service.

- Keep candles / flames away from the player.

- Avoid exposing the player to impact.

- If not in use for a long time, unplug the power supply of the player.

■ Earphone Operation Precautions

1. Please do not tune your headphone/earphones at high volumes; otherwise it may lead to ear damage.
2. In case of any tinnitus, please turn down the volume or stop using this player.
3. It is recommended that the earphones should not be used continuously for a prolonged period.

⚠ Warning

To prevent electric shock, do not expose the unit to rain or moisture. Never attempt to open the cabinet, high voltages are present in the unit.

⚠ Caution

1. Please place the unit in a place with a good airflow.
2. It is normal for the cover and rear panel to become warm after the player has been operating for an extended period of time.
3. Do not move this device during playback. Doing so may cause damage to the unit and the disc.
4. The DVD Video player is a CLASS 1 LASER product. There may be dangerous laser radiation inside. As the laser beam used in this DVD Video player is harmful to the eyes, do not attempt to disassemble the cabinet

⚠ Special Notice

A few highlights or dark spots may appear on the LCD screen. It is a very common phenomenon of active matrix display technology, and does not mean any defects or faults. Never try to repair this machine by yourself. In case of any fault or failure, please turn off the display at once, and notify our Company or the corresponding dealer. The display is made up of many precision electronic components. Any disassembly or modification may lead to further damage.

2. Product Features

1. 7” portable DVD player with built-in Digital & Analogue tuner, card reader and USB port.
2. Plays DVD, VCD, SVCD, MPEG4, JPEG, MP3, CD-R, CD-RW, WMA.
3. SD/MMC/MS card reader and USB port.
4. Auto Program Search, Electronic Program Guide.
5. Subtitle, Multi-language, Stereo sound.
6. Built-in rechargeable battery for up to 2 hours playback.
7. 10-bit Video D/A Converter, high-definition multi-media interface of up to 500 lines.
8. 24-bit/192 KHz Audio D/A Converter, high quality, professional Hi-Fi standard.

■ 24-bit/192KHz D/A Converter

This is the latest converting technology which can apply for 192KHz sampling rate and 24-bit data soft. The dynamic range of 48 decibel is better than the traditional 16-bit CD code.

■ Laser Lens Power Protection System

The laser lens is the most important part of the DVD Player which affects the unit life and error correction. When reading scratched or non-standard discs, the laser strength will be up to 24 times as powerful. This dramatically decreased the life of the laser lens. The laser lens protection system of this unit ensures the stability of the laser power and increases the life of the laser lens.

3. Accessories

Remote

Car adapter

TV antenna

Earphones

User manual

AC adapter

4. Remote Control

Please remove PVC packaging before using the remote control for the first time.

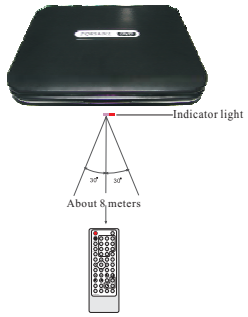

■ Operating range

1. The IR sensor on the remote control should aim directly to the sensor on the front of the player.
2. Use the remote control no further than 8 meters away from the sensor.
3. The receiving angle range should be ±30°.

■ Replacing the battery

If the remote control does not function or if the operating range becomes reduced, replace the old battery with a new one.

1

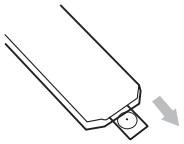

Pull out the battery holder.

2

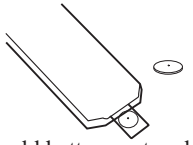

Take the old battery out and insert a new one with the positive + side up (battery type: Cr2025).

3

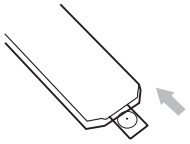

Push back the holder.

Notice:

1. Please ensure proper disposal of used batteries.
2. Do not expose the remote control to direct sunlight or very strong/bright light.
3. Keep the remote control away from extreme hot or humid environment.
4. Keep the remote control away from water.

5. Part Names and Functions

■ Parts on the front of the main unit

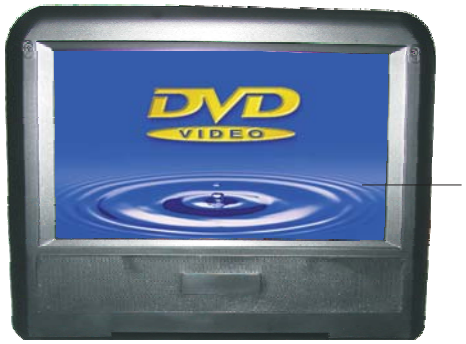

7" TFT LCD DISPLAY(16:9)

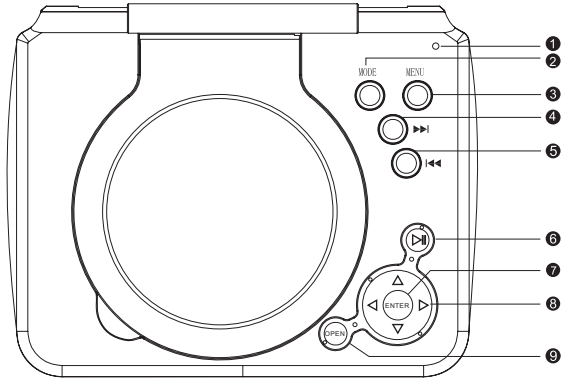

❶ TFT ON/OFF
❷ MODE
❸ MENU
❹ NEXT
❺ PREV
❻ PLAY/PAUSE
❼ ENTER
❽ UP/DOWN/LEFT/RIGHT
❾ OPEN

■ Panel button functions

This table explains the functions of the buttons on the panel in each mode:

	Panel Button	Press	Press & Hold	DVD	DVB	ATV
1	TFT	TFT OFF	TFT OFF	TFT OFF	TFT OFF	TFT OFF
2	MODE	DVD/DVB/ATV	DVB*	DVD/DVB/ATV	DVD/DVB/ATV	DVD
3	MENU	MENU /SETUP		SETUP	MENU	MENU
4	▶▶| /EPG/PRLIST	▶▶|/PRLIST	▶▶/EPG	▶▶|/ ▶▶	EPG/PRLIST	
5	|◀◀/RADIO/RETURN	|◀◀/RETURN	◀◀/RADIO	|◀◀/ ◀◀	RADIO/RETURN	
6	▶II/ON*	▶II		▶II		
7	ENTER	ENTER	AUTO	ENTER	AUTO	AUTO
8	▲	▲/CH+		▲	▲/CH+	▲/CH+
8	▼	▼/CH-		▼	▼/CH-	▼/CH-
8	◀	◀/VOL+	VOL+	◀/VOL+	◀/VOL+	◀/VOL+
8	▶	▶/VOL-	VOL-	▶/VOL-	▶/VOL-	▶/VOL-
9	OPEN	OPEN		OPEN		

*Notice: 1. On standby power off, pressing ▶II can turn on the player.
2. In DVD mode, press and hold MODE to switch to DVB mode for watching digital Freeview TV.

Parts on the right side of the main unit

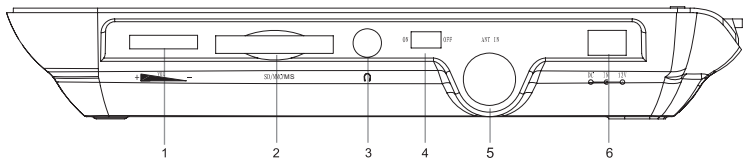

❶ Volume control ❷ SD/MMC/MS card slot ❸ Stereo earphone jack

❹ Power On/Off ❺ Antenna in jack ❻ DC 12V in jack

Parts on the left side of the main unit

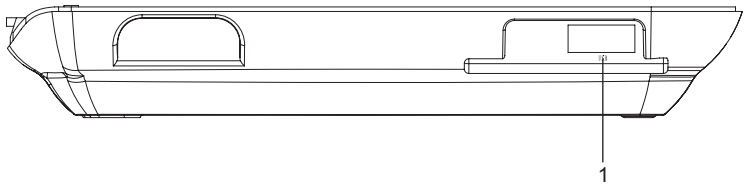

❶ USB port

Remote control functions

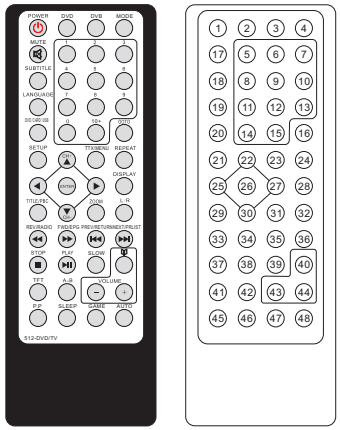

① POWER
② DVD
③ DVB
④ MODE
⑤~⑮ NUMBER button
⑯ GOTO
⑰ MUTE
⑱ SUBTITLE
⑲ LANGUAGE
⑳ DVD/CARD/USB
㉑ SETUP
㉒ ▲/CH+
㉓ TTX/MENU
㉔ REPEAT
㉕ ◀
㉖ ENTER
㉗ ▶
㉘ DISPLAY
㉙ TITLE/PBC
㉚ ▼/CH-
㉛ ZOOM
㉜ R/L
㉝ REV/RADIO
㉞ FWD/EPG
㉟ PREV/RETURN
㊱ NEXT /PRLIST
㊲ STOP
㊳ PLAY/PAUSE
㊴ SLOW
㊵ 🕮
㊶ TFT
㊷ A-B
㊸ - / Vol-
㊹ + / Vol+
㊺ P.P
㊻ SLEEP
㊼ GAME
㊽ AUTO

This table explains the functions of the buttons on the remote control in each mode:

	Remote Button	DVD	DVB	ATV
1	POWER	POWER	POWER	POWER
2	DVD		DVD	
3	DVB	DVB		
4	MODE	MODE	MODE	MODE
5~15	0~9	0~9	0~9	0~9
16	GOTO	GOTO		
17	MUTE	MUTE	MUTE	MUTE
18	SUBTITLE	SUBTITLE	SUBTITLE	
19	LANGUAGE	LANGUAGE	LANGUAGE	LANGUAGE
20	DVD/CARD/USB	DVD/CARD/USB		
21	SETUP	SETUP	SETUP	
22	▲/CH+	▲	▲/CH+	▲/CH+
23	TTX/MENU		TTX	MENU
24	REPEAT	REPEAT		REPEAT
25	◀	◀	◀	◀
26	ENTER	ENTER	ENTER	ENTER
27	▶	▶	▶	▶
28	DISPLAY	DISPLAY	DISPLAY	DISPLAY
29	TITLE/PBC	TITLE/PBC		
30	▼/CH-	▼	▼/CH-	▼/CH-
31	FAV/ZOOM	ZOOM	FAV	
32	L/R	L/R		
33	◀◀/RADIO	◀◀	RADIO	
34	▶▶/EPG	▶▶	EPG	
35	⏮/RETURN	⏮	RETURN	
36	⏭/PRLIST	⏭	PRLIST	
37	■	■		
38	▶II	▶II		
39	SLOW	SLOW		
40	🕮	🕮	🕮	🕮
41	TFT	SCREEN OFF	SCREEN OFF	SCREEN OFF
42	A-B	A-B		
43	-	-	-	-
44	+	+	+	+
45	P.P	P.P	P.P	P.P
46	SLEEP	SLEEP	SLEEP	SLEEP
47	GAME			GAME
48	AUTO		AUTO	AUTO

6. System Connection

Connection illustration as follows:

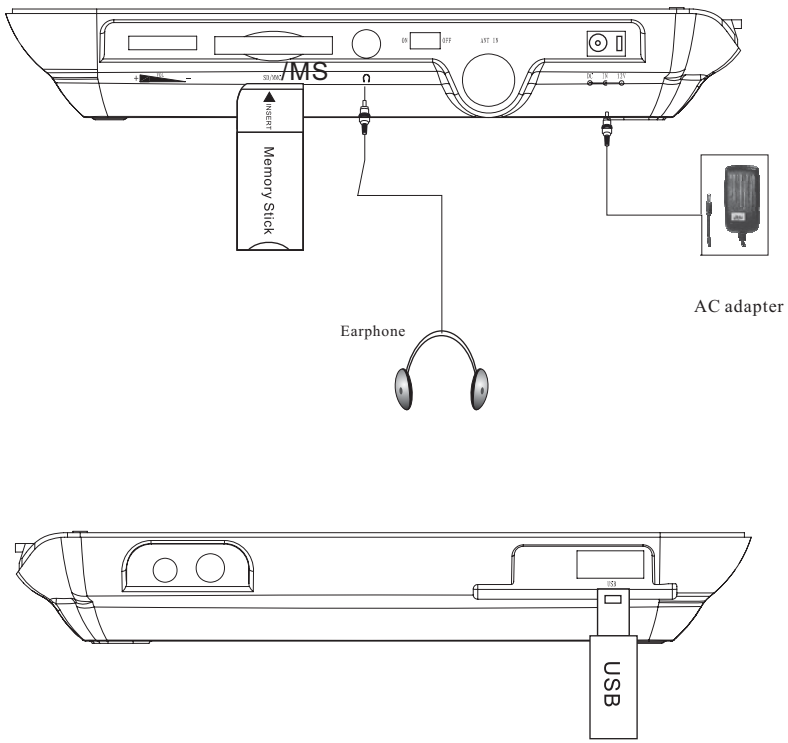

7. DVD Player Operation

After the system is connected, you can use the unit in DVD mode. Before use, please follow the instructions below:

Step 1: Press POWER to turn on the unit and it will begin to read the disc as follows:

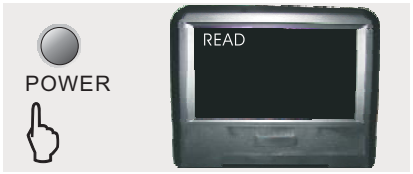

If there is no disc, the display will show:

Step 2: Press OPEN, the disc drive lid will open automatically.

■ Playing Disc

This unit will begin to play after reading the disc.

Press ▶|| to pause playback.
To return to playback, press ▶|| again.

Press |◀◀ to choose the previous track or chapter.

Press ▶▶| to choose the next track or chapter.

Press ▶▶ to search forward at different rate. The player will search the track at 2, 4, 8, and 20 times of the normal speed.

Press ◀◀ to search backward at different rate. The player will search the track at 2, 4, 8, and 20 times of the normal speed.

Press ■ to stop playback.

■ 7.1. Basic Operations

7.1.1. Display

During playback, pressing DISPLAY on the remote control will show the following:
For DVD disc:
The first time DISPLAY is pressed, the play time of the chapter will show.

The second time DISPLAY is pressed, the language, subtitle and angle information will show.

For DVD, Super VCD disc:
Pressing DISPLAY, the single track play time, track number and PBC will show.

7.1.2. Subtitle

Press SUBTITLE repeatedly to select subtitle language. (Up to 32 different languages, only for the discs with this function.)

7.1.3. Language

Press LANGUAGE repeatedly to select audio language, up to 8 different audio languages. (4 for SVCD/CVD discs and only for the discs with this function.)

7.1.4. Title

During playback, press TITLE to enter the TITLE menu and select by pressing ▲\▼\◄\► or numbers during DVD playback.

7.1.5. Move Selection (▲\▼\◄\►)

During playback, pressing UP, DOWN, LEFT, and RIGHT allow the user to easily select Title, Directory or Menu settings.

7.1.6. Number Buttons

During playback, press number button directly to select according to the menu and begin to play a track or chapter.

7.1.7. PBC Play Mode

PBC ON: can only select menu functions using PREV and NEXT.
PBC OFF: can select tracks directly by pressing number button during playback or PREV and NEXT. (This function is for 3.0 version video CD only)

7.1.8. Repeat

During DVD playback, keep pressing REPEAT, it will show:

Repeat one chapter

Repeat one title

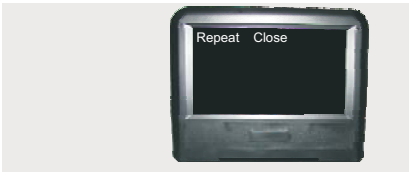

Repeat (off)

During Super VCD/DVD playback, press MENU to select PBC OFF, then keep pressing REPEAT, it will show:

Press REPEAT again to close the Repeat function.

7.1.9. A-B Repeat

During playback, press [A-B] button once to set the starting point and again to set the end point. After setting the points, the program will repeat between A and B. Press [A-B] again to cancel the repeat.

7.1.10. Zoom

The DVD player can zoom up to 4 times to view a dynamic or still picture. Keep pressing ZOOM up to 1,2,3,4,5,6 times for 2,3,4,1/2,1/3,1/4 times zoom. Pressing for the seventh time will return to normal playback. Whilst zoomed in press the directional buttons to move.

7.1.11 Audio Mode

When playing VCD, pressing [L/R] can choose between stereo, left mono, right mono.

7.1.12. Volume/Mute

Press Volume+/Volume- to adjust the volume. Press MUTE to turn off the volume, press again to turn on the volume.

7.1.13. Goto

Press GOTO for selecting chapter/time to play, use LEFT/RIGHT and numbers to change, press ENTER to confirm. Press GOTO at any time to exit.

7.2. DVD Setup Menu

In DVD mode, pressing SETUP, the setup menu will appear. Use LEFT or RIGHT to select a setting and then press UP or DOWN to select one specific function setting. Press ENTER to confirm. Press SETUP again to exit.

7.2.1. System Setup

System Setup has the following options: TV System, Auto Play, Video, TV Type, Password, Rating, and Default.

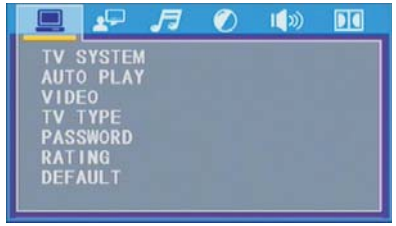

7.2.1.1. TV System

Press ▲\ ▼ to select. Press ENTER to confirm. Press SETUP to exit.
(NOTE: If you have chosen NTSC, your TV system must support NTSC format, otherwise the screen is in black or white only)

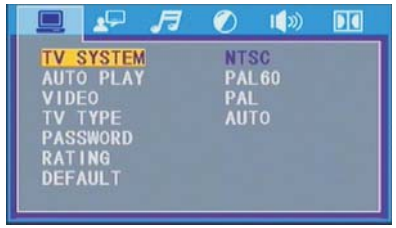

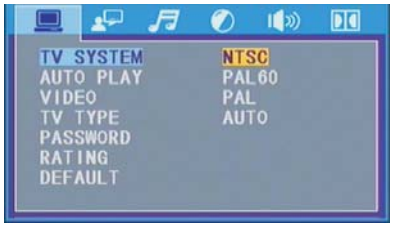

7.2.1.2. Auto Play

This option allows the user to set the Auto Play function On or Off.

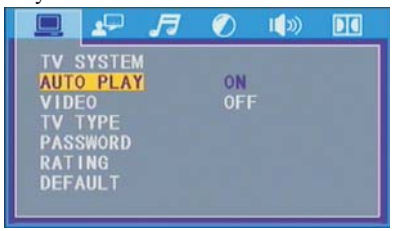

7.2.1.3. Video

This has been set to S-VIDEO as default.

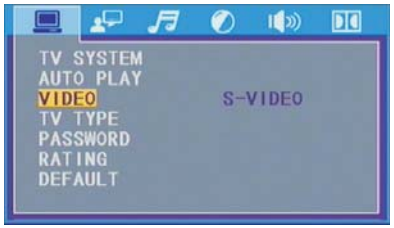

7.2.1.4. TV Type

Use this option to change the display aspect ratio.

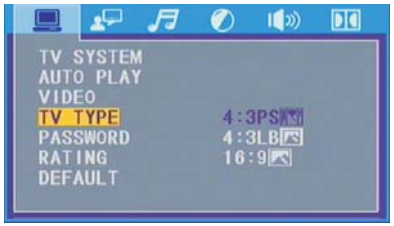

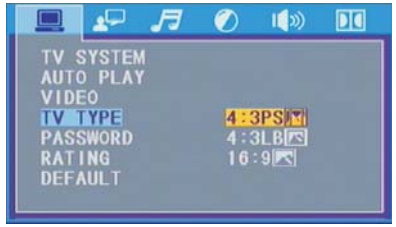

7.2.1.5. Password

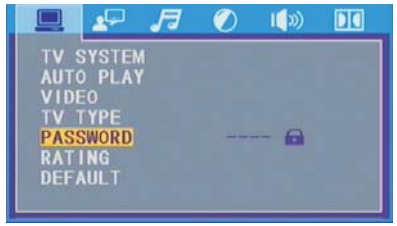

The default code is 0000, entering this number to lock or unlock the password setting, press ENTER to confirm, press SETUP to exit.

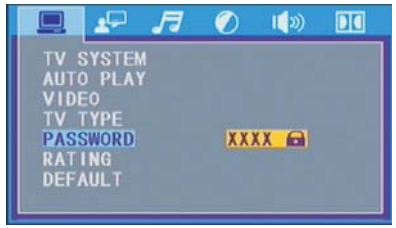

7.2.1.6. Rating

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

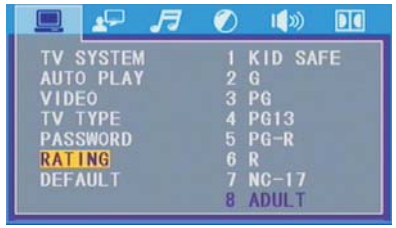

This setting only works when the PASSWORD has been set as UNLOCK, RATING level can be changed from 1 to 8.

7.2.1.7. Default

Once selected, press ENTER to confirm the RESTORE setting, Press SETUP to exit.

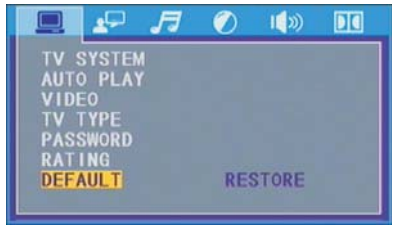

Use this option to change the unit to factory default setup.

7.2.2. Language Setup

Language Setup has the following options: OSD Language, Audio Language, Subtitle Language, and Menu Language.

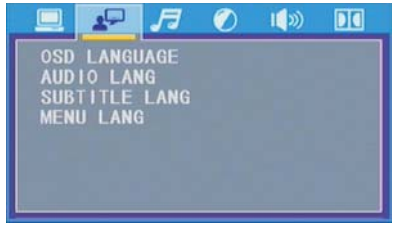

7.2.2.1. OSD (On Screen Display) Language

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

7.2.2.2. Audio Language

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

7.2.2.3. Subtitle Language

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

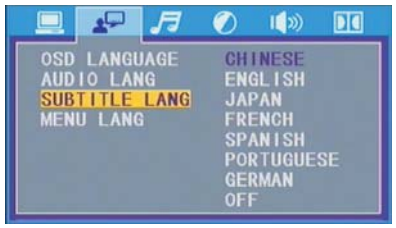

7.2.2.4. Menu Language

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

7.2.3. Audio Setup

Audio Setup has Audio Out and Key options.

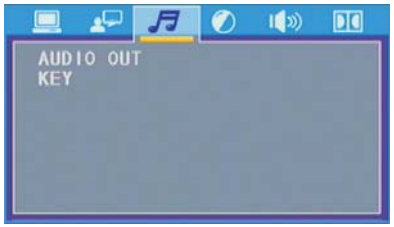

7.2.3.1. Audio Out

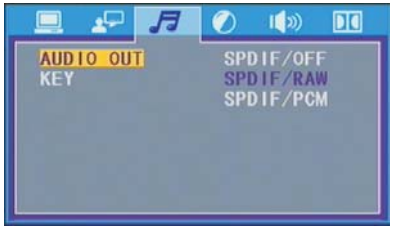

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

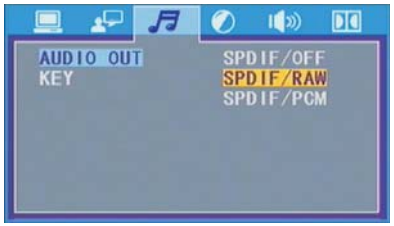

7.2.3.2. Key

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

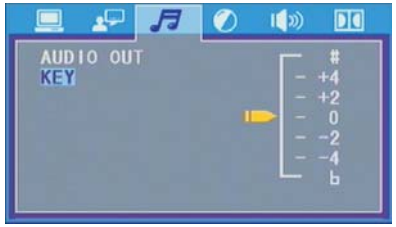

7.2.4. Video Setup

Video Setup has the following options: Brightness, Contrast, Hue, Saturation, and Sharpness.

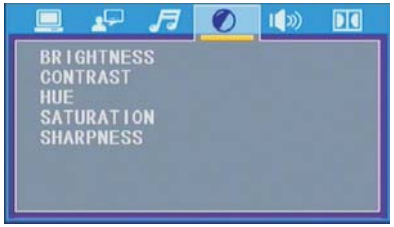

7.2.4.1. Brightness

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

7.2.4.2. Contrast

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

7.2.4.3. Hue

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

7.2.4.4. Saturation

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

7.2.4.5. Sharpness

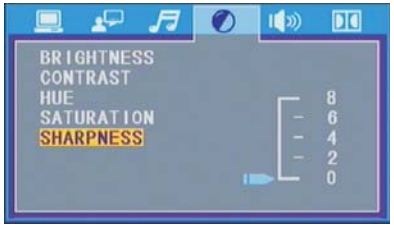

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

7.2.5. Digital Setup

Digital Setup has the following options: Output Mode, Dynamic Range, and Dual Mono.

7.2.5.1. OP (Output) Mode

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

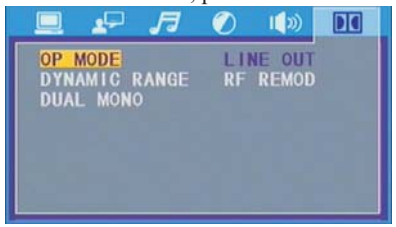

7.2.5.2. Dynamic Range

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

7.2.5.3. Dual Mono

Press UP or DOWN to select, press ENTER to confirm, press SETUP to exit.

■ 7.3. Playing MP3 Music

MP3 adopts the third audio compression format of MPEG to compress the audio signal to 12:1. A disc can record more than 600 minutes of music or 170 songs by using MP3 format and its quality is near to CD.

■ Basic operation

1. Insert the disc, the player will search the disc for data and show the following:

2. Press ▲/▼ and PLAY to select the submenu. Press ► to enter the track menu and press ▲/▼ again to select a track to play. Press PLAY to play this track or select the track directly in this submenu by pressing a number button.

3. Press REPEAT to select Repeat Single Track, Repeat Directory, Repeat Whole Disc, or Repeat Off.

■ Other functions

During MP3 playback, this unit also has Mute, Volume Control, Pause, Previous Track, and Next Track options. The operation is the same as CD playback.

■ 7.4. Playing JPEG Photos

JPEG (Joint Photographic Experts Group) is the most popular storage format for pictures used nowadays. JPEG uses a high compression ratio, compressing by 15-20 times of the original, the images still remain in good quality. Its size is small and can be used flexible. JEPG is supported by most photo management software and is good for photo storage. This player can decode Picture CDs made with JPEG code format.

■ Select pictures using numbers

1. Insert the disc and the player will begin to search the disc for data, the TV screen displays as below (It varies for different disc)
2. Press ▲/▼ to select (Audio) or (JPEG) at the bottom of the screen. Press PLAY to confirm then you can select play music or JPEG picture.
3. Press a number to select the photo collection, for example:

Select pictures using ▲/▼/◄/►

1. Insert the disc, the player will begin to search the disc for data, menu will appear on the TV screen. Press ▲/▼/◄/► to select the submenu on the left side of the screen. Press ENTER or PLAY to confirm. The TV screen shows the following:

2. Press ▲/▼/◄/► to select the picture of this submenu, press PLAY to play.

Other functions

1. When playing JPEG files, pause play and repeat play can also be performed.
2. When playing JPEG files, press TITLE/RETURN to return to the menu.
3. During playback, press PREV and NEXT to select the previous or next picture.
4. During playback, press ▲/▼/◄/► to rotate the picture to up, down, left or right.

Playing MPEG4 Video

MPEG4 is a video compressing standard which supports movie play. The basic operations are the same as MP3 functions.

7.6. USB Port Function

1. The USB port is compatible with flash memory, it is not guaranteed that it can be used with all types of MP3 players.
2. Insert the USB stick to the USB port of this device.
3. The files in the memory stick will show on the screen.
4. Press ◄/► to select the ♫ (Audio) or ▣ (JPEG picture) at the bottom of the screen and press PLAY to confirm. Then you can select play music or JPEG pictures.
5. Pressing number buttons or ▲/▼/◄/► can select play files.
6. Other operations are the same as the JPEG function.

7.7. Card Reader Function

1. Insert the SD, MS, or MMC card to the card slot on the side of the TV.
2. The files in the card will show on the screen.
3. Other operations are the same as the USB function.

8. Digital Freeview TV (DVB-T)

8.1. Turn on the Machine

Press POWER to turn on the machine. It will enter the mode that it was when last turned off.
If it enters DVD mode, press DVB to switch to DVB mode. For DVB mode, it will select the last channel watched. If there was no last channel watched, or it is the first time it is powered on, a message will appear, asking if the user wants to run the first time installation wizard.

Picture 1

8.2. First Time Installation

A message will appear, asking if the user wants to run the first time installation wizard. Upon selecting [YES], a new message will appear, asking for country and OSD language. Use the arrow keys to select the appropriate. Select [NEXT] and press ENTER to proceed to the next screen. On this screen, the user will be asked whether they want to perform an auto scan of the channels, select [YES] and press ENTER to start the scan.

Picture 2

Picture 3

Picture 4

Picture 5

8.3. Main Menu

Pressing SETUP will enter the main menu, pressing SETUP again or RETURN will exit the menu.
In the Main Menu, press ▲/▼ to select Channel Guide, System Config, Installation, or Game submenu, press ► or ENTER to enter the submenu setting.

Picture 6

Picture 7

Picture 8

Picture 9

8.3.1 Channel Guide

Press ▲/▼ to select TV Channels, Radio Channels, Channels Class and Channels Edit options, press ENTER to confirm.

8.3.1.1. TV Channels

Upon entering the TV Channels menu, the channels are listed on the left side of the screen, and a preview window is on the right side. The channel can be changed using ▲/▼, press DISPLAY to sort the channels, press ENTER to start watching TV in full screen.

Picture 10

Picture 11

8.3.1.2. Radio Channels

Upon entering the Radio Channels menu, the channels are listed on the left side of the screen, and as they are radio channels, the default screen picture of this TV will appear in the preview window on the right side. The channel can be changed using ▲/▼, press DISPLAY to sort the channels, press ENTER to start listening to the radio.

Picture 12

8.3.1.3. Channels Class

From the Channels Class menu, each channel can be classified into a group. Press ENTER if you wish to add any channels to a column category, press ENTER again to cancel. Press RADIO button to switch to radio channels, press RADIO again to switch back to TV channels.

Picture 13

8.3.1.4. Channels Edit

To edit a channel's name, press ▲/▼ to move to the channel, press ENTER to confirm, press ◄/► to select a character, press ▲/▼ to change the character, press ENTER to confirm the change.

To change the channel's display sequence, press ▲/▼ to move to the channel, press ◄/► to move the cursor to the MOVE column, press ENTER to confirm, press ▲/▼ to move the cursor to the row you prefer, press ENTER to confirm.

To delete a channel, press ▲/▼ to move to the channel, press ◄/► to move the cursor to the DELETE column, press ENTER to confirm, press ENTER again to cancel. Press RETURN or SETUP to exit.

Press RADIO button to switch to radio channels, press RADIO again to switch back to TV channels.

Picture 14

8.3.2. System Config

Press ▲ /▼ to select TV Setting, Video Setting, Audio Setting, Language, Parent Control, Time Setting, and System Info Options, press ENTER to confirm.

8.3.2.1. TV Setting

The TV Setting has the following options: TV System, Video, and TV Type. Press ▲ /▼ to move the cursor to one of the options, press ◄ /► to change the setting, or press ENTER to change the setting. Press RETURN or SETUP to exit.

Picture 15

8.3.2.2. Video Setting

The Video Setting has the following options: Brightness, Contrast, Hue, and Saturation. Press ▲ /▼ to move the cursor to one of the options, press ◄ /► to change the setting, or press ENTER to change the setting. Press RETURN or SETUP to exit.

Picture 16

8.3.2.3 Audio Setting

This function is not available yet.

8.3.2.4 Language

The Language menu allows the user to change the OSD Language. Press ◄ /► to change the language, or press ENTER to change the setting. Press RETURN or SETUP to exit.

Picture 17

8.3.2.5 Parent Control

The Parent Control menu has two options: Change Pin and Channel Lock. When selecting Change Pin, the user will be asked to enter the Old Pin, New Pin and the New Pin again. In order to change the Channel Lock, the user will be asked to enter the password (pin) first, if the password is correct, the Channel Lock menu will appear. Use ▲ /▼ to select a channel, press ENTER to lock or unlock the channel. Press RADIO button to switch to radio channels, press RADIO again to switch back to TV channels. Press RETURN or SETUP to exit.

Picture 18

Picture 19

Picture 20

Picture 21

The system default password is 0000.

8.3.2.6 Time Setting

TIME ZONE: If you fixed the country whilst searching for channels, you cannot adjust the time zone. Restore to factory settings, and don't search for channels. Access the TIME ZONE menu, then press ENTER, a menu will show, use UP or DOWN to select the time zone you are and press ENTER to confirm.

8.3.2.7 System Info

System Info displays the firmware version and date, along with tuner and model information.

Picture 22

8.3.3 Installation

Press ▲ /▼ to select Auto Scan, Manual Scan, and Default Setup Options, press ENTER to confirm.

8.3.3.1 Auto Scan

In Auto Scan, press ◄ /► to select your country, press ▲ /▼ to move to Start Scan, Press ENTER to start.

Picture 23

Picture 24

8.3.3.2 Manual Scan

In Manual Scan menu, a scan can be performed by setting the following options: Country, Scan Type, Start Channel, End Channel. If the Scan Type is Signal Channel, only the Country and Start Channel can be set. If the Scan Type is Channel Range, the Country, Start Channel, and End Channel can be set. Use the ▲ /▼ to select the options and ◄ /► to change the settings. Once finish the setting, move to Start Scan and press ENTER to start.

Picture 25

8.3.3.3 Default Setup

A message box will appear, asking if you want to reset the machine to factory default settings. After the reset, the first time installation message will appear.

Picture 26

8.3.4 Game

There are three games in the Game menu. Press ▲ /▼ to select the game you want to play, press ENTER to confirm. The games are played using ▲ /▼ /◄ /► button. Press RETURN or SETUP to exit the game.

Picture 27

Picture 28

Picture 29

Picture 30

9. Screen Setting

Bright

Press 📖 to enter Brightness menu.
Press + or - to adjust.

Contrast

Press 📖 repeatedly to enter Contrast menu.
Press + or - to adjust contrast.

Color

Press 📖 repeatedly to enter Colour menu.
Press + or - to adjust.

Hue(Only in NTSC/SECAM mode)

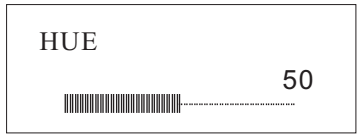

Press 📖 repeatedly to enter Hue menu.
Press + or - to adjust.

Volume

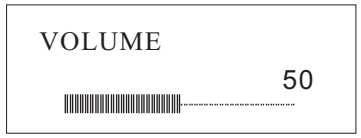

Press 📖 repeatedly to enter Volume menu.
Press + or - to adjust.

Reset

Press 📖 repeatedly to enter Reset menu.
Press + or - to reset the Brightness, Contrast, Colour, Hue and Volume settings to the default level 50.

10. Analogue TV

Press MODE on the remote control to switch to the Analogue TV mode.
Press MENU repeatedly, the following options will show:

PICTUR	VOLUME	OPTION
SYSTEM	PRESET	CLOCK

10.1. Picture

Press UP or DOWN to select between Brightness, Contrast, Colour, and Language settings.

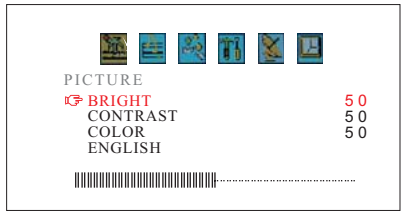

▲ / ▼ Select ◄ / ► Adjust

Press LEFT or RIGHT to change the setting.

10.2. Volume

Press LEFT or RIGHT to change the volume setting.

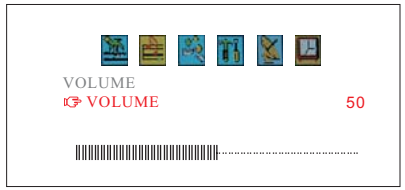

▲ / ▼ Select ◄ / ► Adjust

10.3. Option

Press UP or DOWN to select between Zoom, Blue Background, Game, Calendar, picture up down and mirror effect settings.

▲ / ▼ Select ◄ / ► Adjust

Press LEFT or RIGHT to change the setting.

10.4. System

Press UP or DOWN to select between Color-Sys, Sound-Sys, Swap and Copy settings.

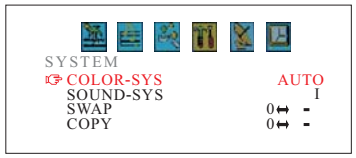

▲ / ▼ Select ◄ / ► Adjust

Color-Sys: Press LEFT or RIGHT to select between AUTO, PAL, and SECAM.
Sound-Sys: Press LEFT or RIGHT to select between I, L, BG, and DK.
Swap: Use LEFT, RIGHT, UP or DOWN to swap channel positions.
Copy: Use LEFT, RIGHT, UP or DOWN to copy and change channels.

■ 10.5. Preset

Press UP or DOWN to select between Auto Search, Search, Fine tune, Band, Position and Skip settings.

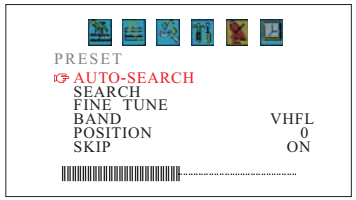

▲ / ▼ Select ◄ / ► Adjust

Press LEFT or RIGHT to change the setting.

■ 10.6. Clock

Press UP or DOWN to select between Sleep, Time, Off-Time, and On-Time settings.

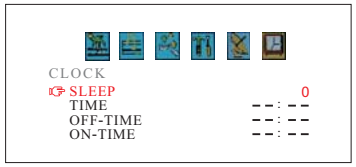

▲ / ▼ Select ◄ / ► Adjust

Sleep: The unit can be set to turn off automatically after certain time, press LEFT or RIGHT to select from 0 to up to 240 minutes maximum with 10 minutes intervals.

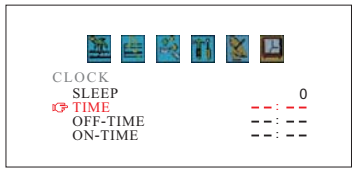

◄ :Adjust hour ►:Adjust minute ▲ / ▼ :Select items to be setup

Time: Press LEFT to change the hours, press RIGHT to change the minutes.
Off-Time: The unit can be set to turn off automatically, press LEFT to change the hours, press RIGHT to change the minutes.
On-Time: The unit can be set to turn on automatically, press LEFT to change the hours, press RIGHT to change the minutes.

⚠ Notice

1. Auto Search → Start from Program NO .0.
2. When the signal is received under Manual Search, the indication frequency will stop, which is the optimum position for signal storage. If the signal is too weak, the system will automatically identify it as no signal.
3. In the case of a picture without sound, please check the Sound System for correct setup first.
4. If the input signal is not strong enough, please adjust “Fine” option, it may improve the picture and sound quality.

⚠ Caution

If the signal is too weak, the image will remain poor whatever you do, and may output loud noises, shaking images and inferior sound etc., which is not the TV's fault. If the image remains poor when using the telescopic antenna, please try to use a roof top aerial or an amplified external antenna.

11. Battery Charging

1.A lithium battery is built into this player.

Charging time: 5 hours

Playback time: up to 2 hours

2.To charge, connect the supplied AC adaptor to the socket marked “DC IN 12V” and the charging indicator will go red. This shows that the battery is charging. When charging has finished, the red light will turn green.

⚠ Warning

Use only the supplied power adapters with this device. Failure to do so can cause damage to the device and risk personal injury.

⚠ Warning

The replacement of the built-in lithium battery, it must use the same type of battery factory, otherwise, it could have unclear consequences.

⚠ Special Notice

Please ensure unit is turned off when not in use. If the battery has not been used for some time (6 months) then fully charge the battery to ensure maximum battery life.

12. Troubleshooting

Problems listed below do not necessarily signify a fault with the unit.
Please check this list before requesting repairs.

Problems	Possible Causes and Solutions
No picture and no sound	Check the connection with the AC adapter/Car adapter. Use of an unauthorized power supply. Power switch on the side of the TV is off. TV is on standby as it was switched off by pressing the POWER on remote.
No image	Check the channel selection. Scan for channels again. Always rescan for channels in new locations. Ensure video settings are correct.
No sound	Check the sound volume. If you are using earphones, test them on another item. Check that the cable is plugged in. Sound System is not correctly set in Analogue TV mode.
Picture freezing, and/or sound distorting	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
No signal	Signal too weak, please check the aerial. Try to use a proper roof top aerial or an amplified aerial.
Dark Picture	Please adjust Brightness and/or Contrast settings.
Snowstorm	Motors/Trains/High Voltage Lines and Neon Lights may affect the signal.
Achromatic/Flashing/No Colour	Please adjust the Colour Setting. Color-Sys is not correctly set in Analogue TV mode.

13. Technical Parameters

Product Name: 7 inch portable DVD player with built-in Digital & Analogue tuner, card reader and USB port
Disc Format: DVD, VCD, SVCD, MPEG4, JPEG, MP3, CD-R, CD-RW, WMA.
Picture Resolution: ⩾500 Line
Video S/N Ratio: ⩾ 60dB
Frequency Response: fs 96KHz: 4Hz-44KHz:+/-1dB
Audio S/N Ratio: ⩾ 90dB
Dynamic Range: ⩾ 90dB
Harmonic Distortion: <0.01%
D/A Converter:96KHz/24bit
Video Output Level: 1Vp-p(75ohm)
Audio Output Level: 1.0V0.1V
DVB Band Wide:6☐ 7☐ 8☐
DVB VHF:177.5MHz~226.5MHz
UHF:474MHz~858MHz
DVB Decode standard:MPEG2 ISO/IEC13818 MPEG2 MP@ML
ATV Receiving Channel: 48.25MHz~855.25MHz
ATV Sound System: DK☐ I☐ BG☐ L☐ M☐ N☐
Screen Size: 7 inches
Audio Output: 0.3W (Max)
Loudspeaker: two 40x20mm squareness loudspeaker.
Outer Dimension: 200 x 165 x 41mm
Weight: about 895g
Dot Matrix: 0.107(H) 0.372 (V)
Resolution: 480 **x** RGB **x** 234
Response Speed (ms): R: 30 / F:50
Visible Angle: U: 15 / D:35, R / L:50
Brightness: 200cd/m^2
Contrast: 150:1

⚠ Warning

This operation instruction is only intended for reference. No further notice is available to any modification of all information contained therein. Due to continuing improvements, the features and design are subject to change without notice.

⚠ Warning

No user serviceable components are fitted inside this TV. Do not attempt any repairs, as this will invalidate the warranty. Any repairs must be carried out by either the manufacturer or their nominated service centre. Parts inside this set are subject to high voltage.

【☑ after some items in this manual means it is available with this function. 】

Warranty

This product is guaranteed for 2 years from the date of the original purchase. This warranty covers costs of parts and labour for the first 12 months and covers manufacture defects of major components which include LCD screens, DVD disc loaders and software on main circuit board for the second 12 months. In the unlikely event of any defect arising due to faulty materials or workmanship, the unit will be either replaced or repaired (where possible) during this period. An alternative product will be offered in case the product is no longer available or repairable.

This warranty is subject to the following conditions:

- The warranty is only valid within the country where the product is purchased
- The product must be correctly installed and operated in accordance with the instructions given in the user's manual.
- The product must be used solely for domestic purposes.
- The warranty only covers the main unit, and does not cover the accessories.
- The warranty does not cover the damage caused by misuse, negligence, accident and natural disaster.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repairs. The manufacture disclaims any liability for incidental or consequential damages.
- Please consult our customer service before returning any product; we are not responsible for any unexpected product returns.
- Any faulty products must be kept and returned in the original packaging with all the accessories and the original copy of the purchase receipt.

The warranty is in addition to, and does not diminish, your statutory or legal rights.

Please note:

1.A LCD display panel comprises a very large number of pixels and each pixel contains three sub-pixels - red, green and blue. Due to the complex manufacturing process, occasional pixel anomalies may occur. Pixel anomalies cannot be fixed or repaired and can happen at any stage in the LCD's life. August products should not be deemed as faulty if there are no more than three bright and dark pixels respectively.

2.Portable TV antennas included in the box are for people to watch Freeview TV in areas where the signal is very strong and there may be difficulties in receiving signal with the included portable antennas in some regions at present. This is due to the fact that Freeview is yet to operate in full power in the UK. August TVs should not be deemed as faulty if it can receive Freeview by connecting to a proper digital rooftop aerial.

Customer Service:

Telephone: +44 (0) 870 850 3525

Email: service@augustint.com